


FAR INFRARED SAUNA DOME INSTRUCTION MANUAL



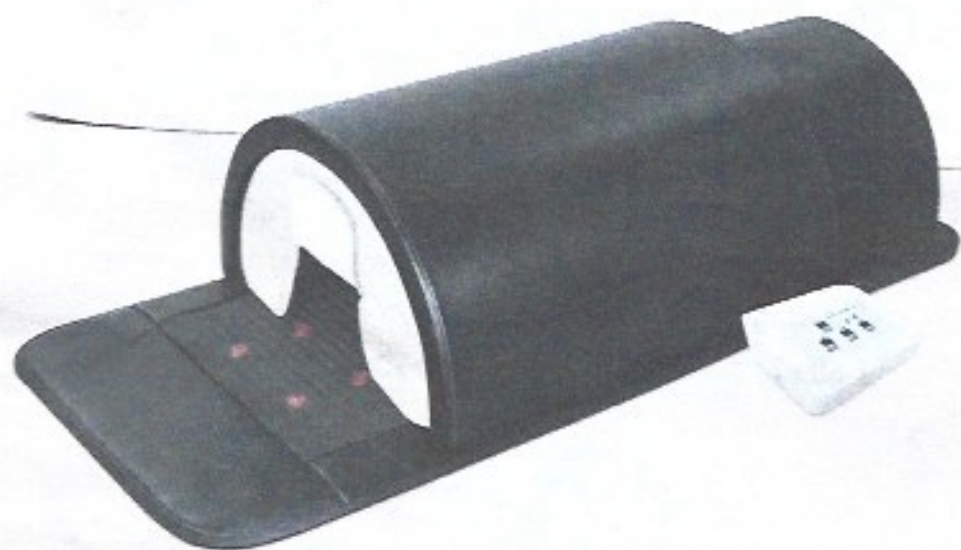

[Product name]	Far infrared sauna dome	
[model]	S-108	
[Product power]	1200W	
[Temp setting]	25-80°C	
[Time setting]	5-60 minutes	
[Voltage]	220V-240V	
[Size]	Mat: 190* 80cm	Dome: 180*80*45cm

Important safety instructions(Read before use)

Consult with a medical practitioner before use if you have a medical or other condition listed below. Use of our product is not recommended without your doctor's approval.

- Skin diseases, burns, or reddening
- Sensitivity to heat/temperature
- Heart disease or illness
- Broken bones
- Just had surgery
- Feel nauseous, have a headache or other symptoms
- Splanchnic diseases
- Osteoporosis
- Suffer from abnormal blood pressure
- Currently pregnant or breastfeeding
- Anhidrosis
- Cancer or other malignant conditions
- You have any metal or other body implants

Electrical safety

Basic safety precautions should be followed to reduce risk of fire, electric shock, and injury. Misuse or failure to follow directions may cause overheating, fire, or injury to user and/or property.

Before using the product, make sure that your local electric network complies with the voltage and frequency indicated in this manual.

Otherwise, the machine may be damaged in case of excessive current or voltage rise.

It is dangerous to change or try to modify the function of this product in any way.

Do not attempt to operate this unit if the power cord has been frayed or broken.

Instruction

- Do not spill water or other liquids into or onto your unit.
- During long periods of non-use, disconnect the unit main power.
- Controller is not waterproof. Do not immerse in water or other liquids.
- Keep away from wet or damp areas at all times.
- Do not use close to other electrical heated products or in high temperature places

Important safety instructions

- Do not wear metal jewelry or other metal items when using the product.
- Do not put the product on a leather bed. please put a cotton towel between product and bed. The high temperatures can cause the PVC and leather to fuse together.
- Do not use corrosive cleaning products to clean the product.
- Do not let the product heat without a person inside the product. This can damage the product.
- Do not fold the product when it is still hot. Allow the product to cool completely before storing.
- Do not wrap the cord tightly around the product or controller. Allow the cord to be loose. Do not store items on the product, this could potentially damage the sauna.
- Do not put the product in direct sunlight. When storing, store the product in a cool, dark place.
- Please keep the inside of the product clean and dry.
- Remove the power cord from the control box when not in use. Do not leave the working sauna unattended.
- Do not allow children, toddlers, or infants to use this product.
- Keep all dogs, cats, and other pets away from the heated product.

Instruction

Before use instructions


What do i wear ?

- It is recommended to wear comfortable, casual , skin covering clothing. We suggest more breathable attire.

Where do i use?


- The product can be placed on any heat-resistant surface like your bed or sofa.(No waterbeds, latex, plastic, memory foam, mechanically adjusted beds, bunk beds, or child bed/crib) and make sure you are comfortable by adding a pillow for cushion.
- Before each use, inspect the product for any damage. Inspect the controller and wires to ensure there is no fraying. Do not use if found.

Usage

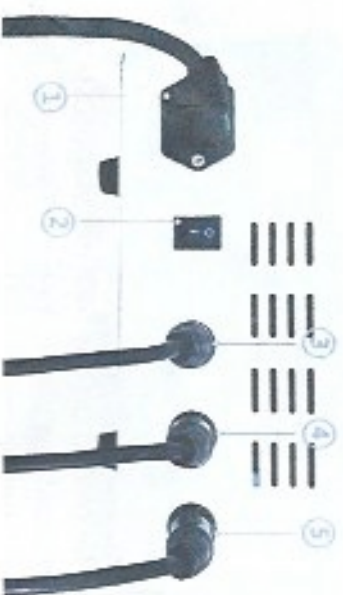

1. Supply sockets
2. Power switch(on/off)
3. Heating mat
4. Lower dome
5. Upper dome

After connection

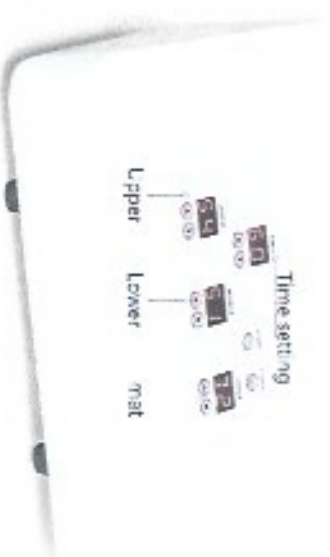

Usage

Time setting

- o 5 - 60 minutes can use, press "+" or "-" to select the appropriate time

Attemperation

- o 25 - 90°C for dome, 25 - 80°C for mat, 3 zone individually adjustable. After setting temperature, it will slowly warm up from 25°C.

Attention

